


# Mirage Retractable Screen Details - French Door

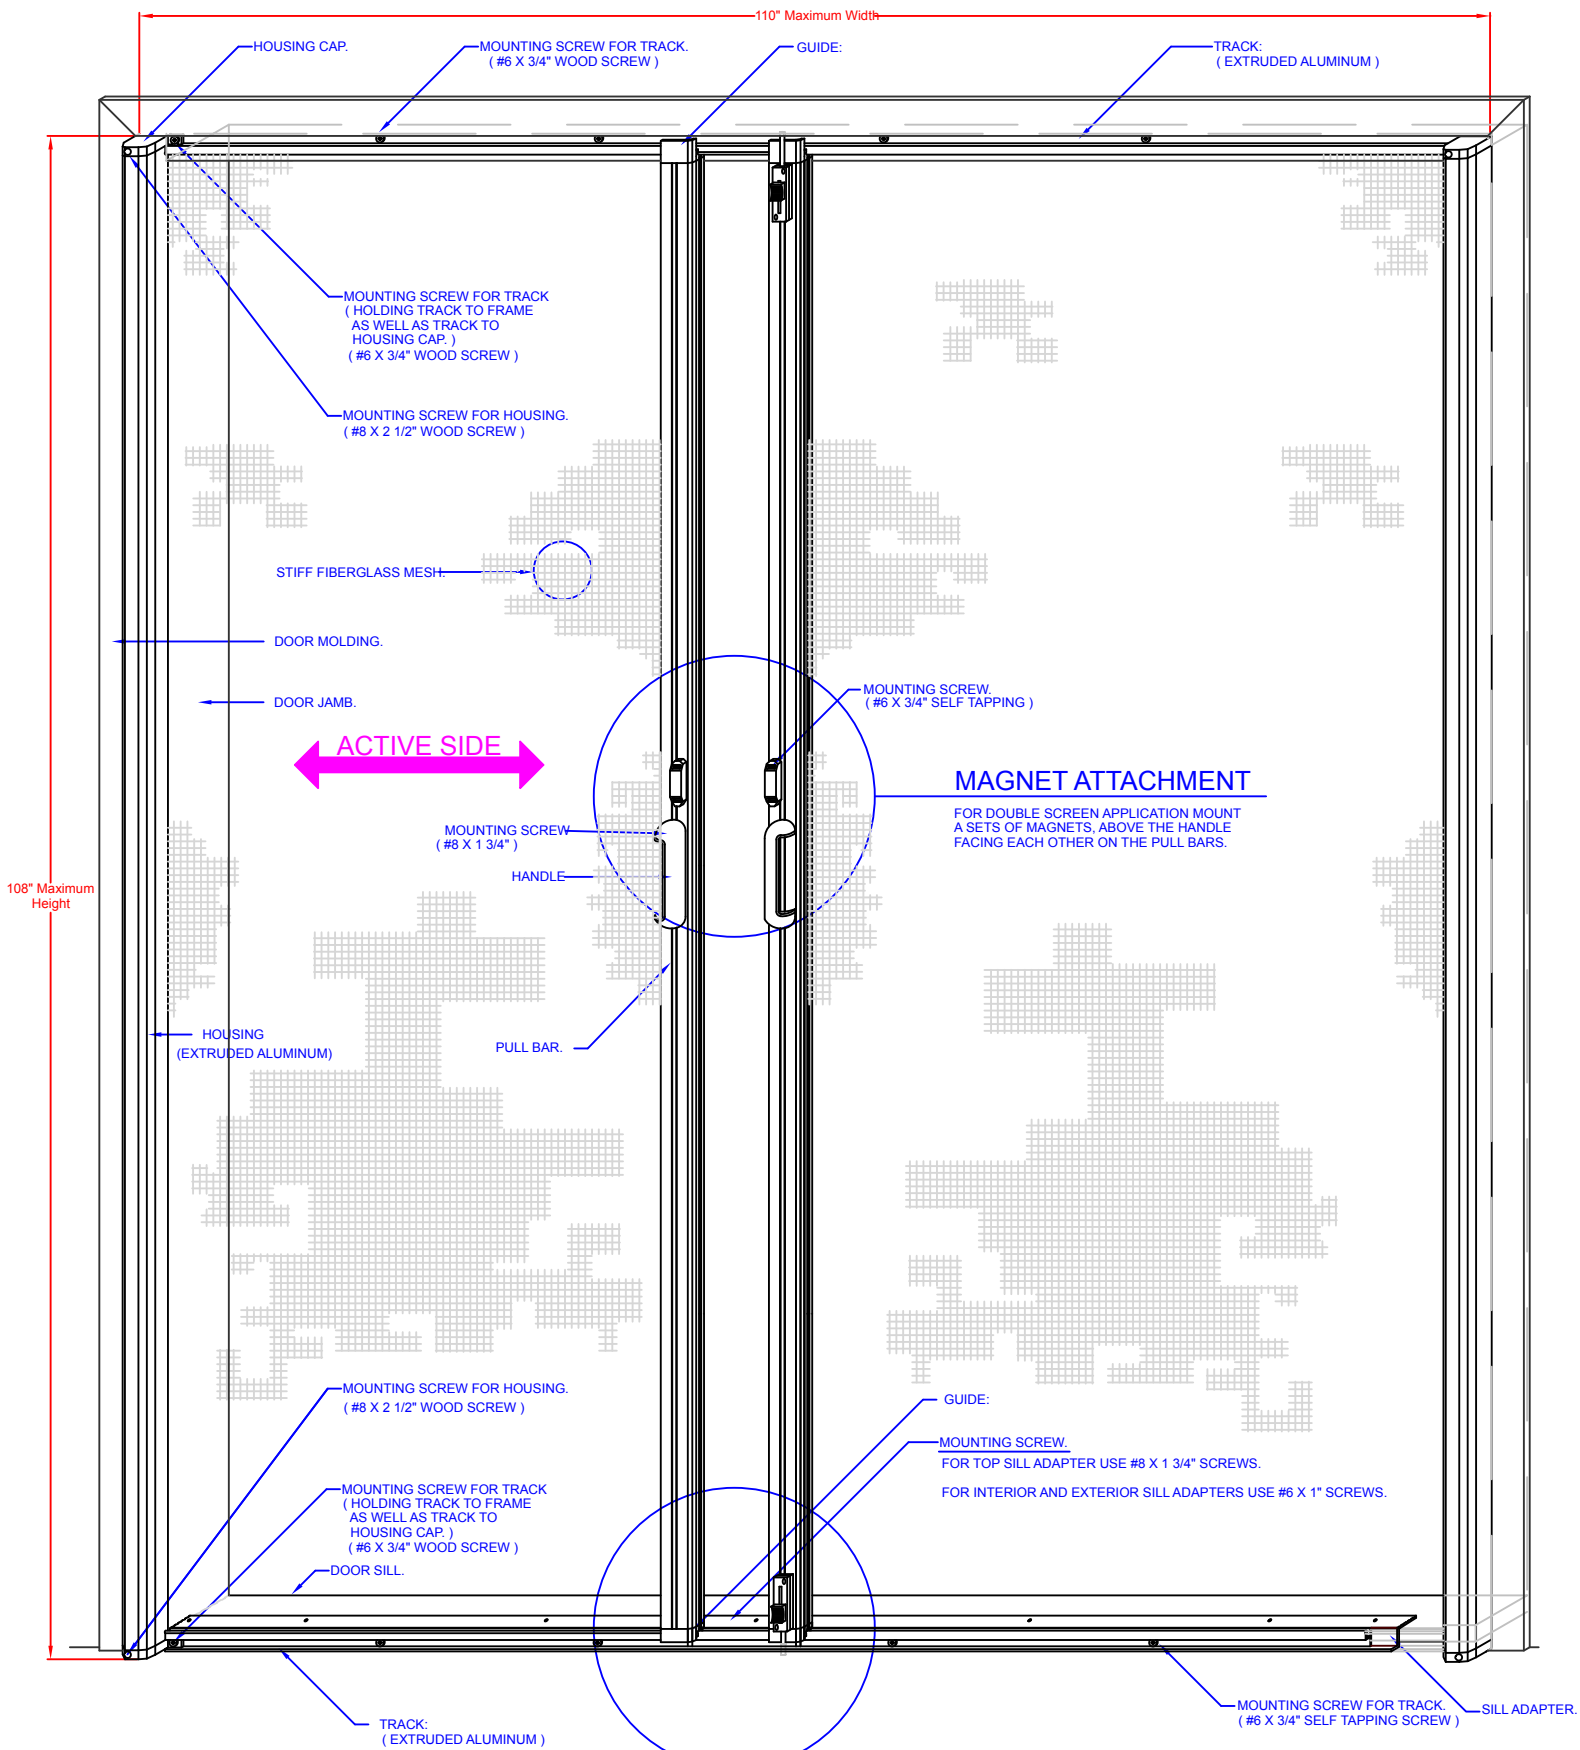

## SLIDE BOLT ATTACHMENT.

ATTACH TWO SLIDE BOLTS TO THE INACTIVE SCREENS PULL BAR, ONE AT THE TOP AND ONE AT THE BOTTOM. DRILL A HOLE IN THE SILL AND DOOR FRAME SO THAT WHEN THE BOLT IS EXTENDED IT WILL FIT SNUGLY IN.